


TURN SIGNAL AND HAZARD WARNING LIGHT

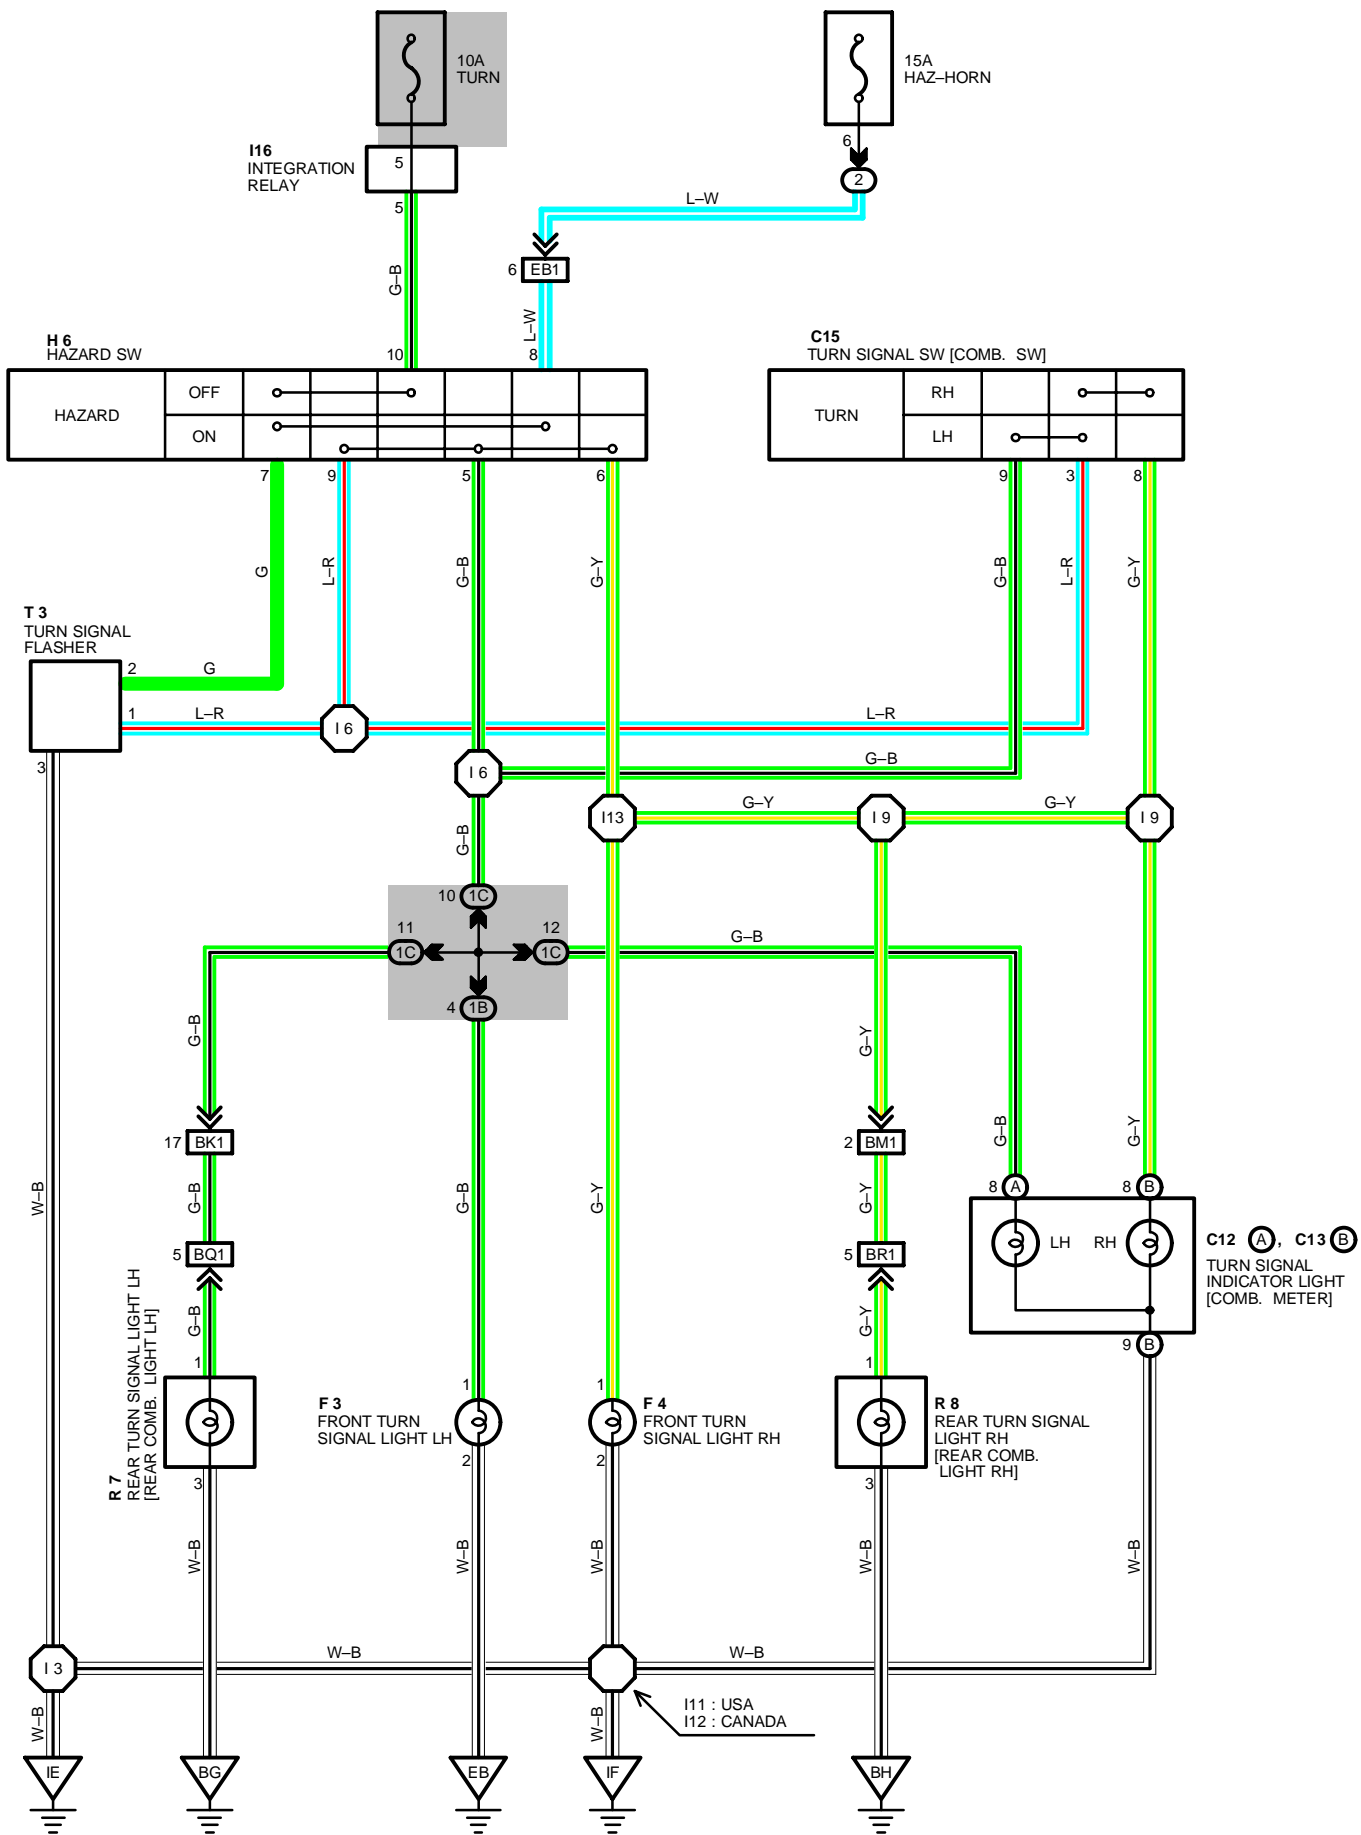

SERVICE HINTS

T 3 TURN SIGNAL FLASHER

- 2-GROUND: APPROX. 12 VOLTS WITH IGNITION SW ON OR HAZARD SW ON
 1-GROUND: CHANGES FROM 12 TO 0 VOLTS WITH IGNITION SW ON AND TURN SIGNAL SW LEFT OR RIGHT, OR WITH HAZARD SW ON

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C12 A	28	F 3	26 (22R-E)	I16	28
C13 B	28	F 4	24 (3VZ-E)	R 7	29
C15	28	F 4	26 (22R-E)	R 8	29
F 3	24 (3VZ-E)	H 6	28	T 3	28

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	30 (3VZ-E) 32 (22R-E)	COWL WIRE AND ENGINE ROOM MAIN WIRE (R/B NO. 2)
BK1	36	FLOOR NO. 3 LH WIRE AND COWL WIRE (LEFT SIDE OF FRONT LH SEAT)
BM1	36	FLOOR NO. 3 RH WIRE AND COWL WIRE (RIGHT SIDE OF FRONT RH SEAT)
BQ1	36	FLOOR NO. 3 LH WIRE AND FLOOR NO. 2 WIRE (LEFT SIDE OF REAR LH SEAT)
BR1	36	FLOOR NO. 3 RH WIRE AND FLOOR WIRE (RIGHT SIDE OF REAR RH SEAT)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	30 (3VZ-E) 32 (22R-E)	LEFT FENDER
IE	34	LEFT KICK PANEL
IF	34	RIGHT KICK PANEL
BG	36	UNDER LEFT REAR PILLAR
BH	36	UNDER RIGHT REAR PILLAR


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 3	34	COWL WIRE	I11	34	COWL WIRE
I 6			I12		
I 9			I13		


C12 (A)

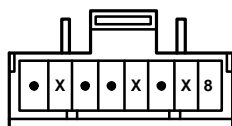


C13 (B) GRAY

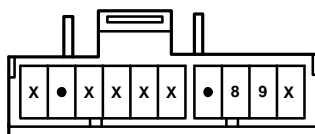


(USA) C15 BLACK

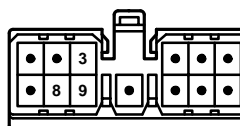


(CANADA) C15 BLACK

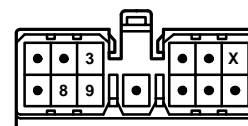


F 3, F 4

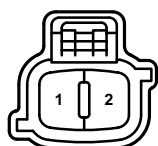

H 6 ORANGE

 

I16

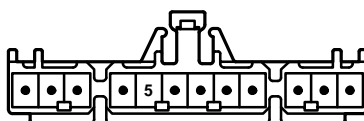

R 7, R 8



T 3

